
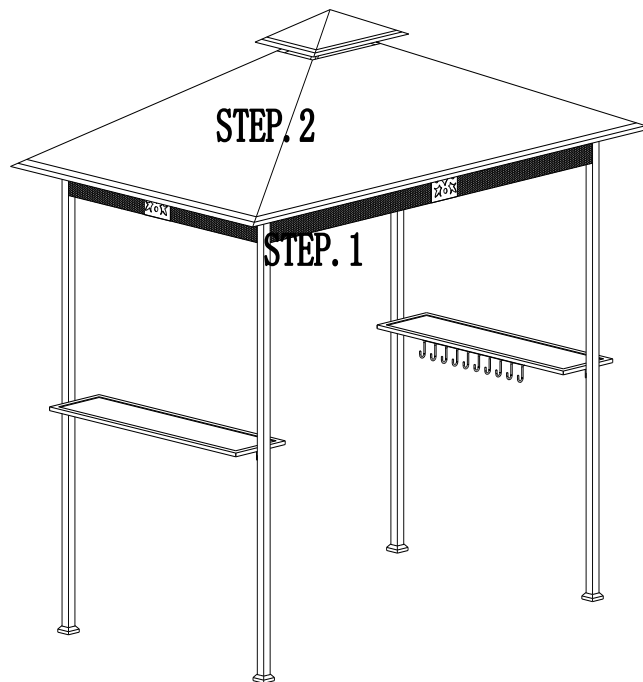


Assembly Instructions

Item# L-GG067PST

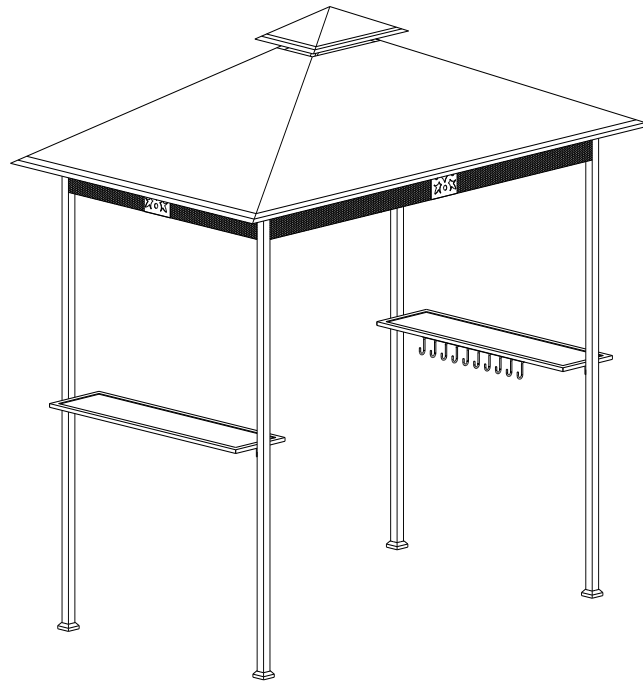

IMPORTANT:

 
 
 
 

 
 
 



 
 
 


Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble.

1. When installing and assembling your gazebo, it is recommended that 2 or more adults are involved. It takes one or two hours to assemble the gazebo.
2. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightning.
3. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
4. Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure.
5. This package contains small items and plastic bags that should be kept away from children.
6. Ensure that all connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
7. WARNING: Keep all flame and heat sources away from this tent fabric. This tent is made with fabric that meets CPAI – 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the Flame-resistant properties ineffective.
8. WARNING: Please take down the gazebo during strong wind. The manufacturer or retailer is not liable for any loss of the product or other items due to the failure to take down the gazebo during strong wind.

 

 
 
 

 
USE & CARE

1. This Gazebo is not a permanent structure and should be disassembled & stored away after use.
2. Do not repack your gazebo until completely dry.
3. This Gazebo must be assembled by two adults or more.

Parts List

Post (1)	A1	2	
Post (2)	A2	2	
Small top connector	B	1	
Big top connector	C	2	
Decorative Cap	D	4	
Hook	E	1	
Small beam	F	4	
Big beam	G	4	
Long screen	H	2	
Short screen	I	2	
Glass panel	J	2	
Hook rack	K	1	
Base cover	L	4	
Base	M	4	
Small canopy	N	1	
Big canopy	O	1	

Hardware Pack 1

AA	M6*15 Bolt	12 PCS	
BB	M6 Big flat washer	44 PCS	
CC	M6*15 Bolt	8 PCS	
DD	M6*30 Bolt	16 PCS	
EE	M6*35 Bolt	4 PCS	
FF	M6 Nut	4 PCS	
Z	M6 Wrench	1 PCS	

Step 1

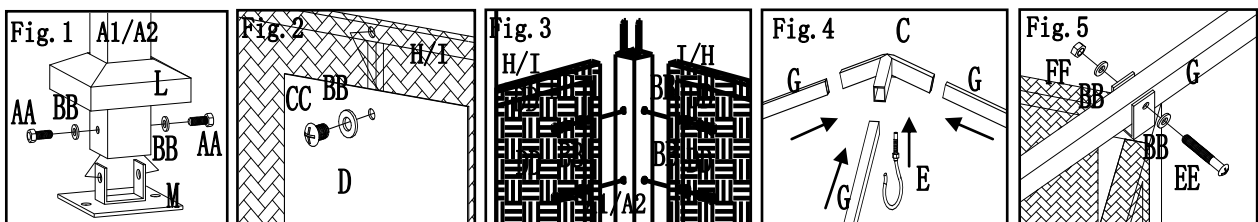
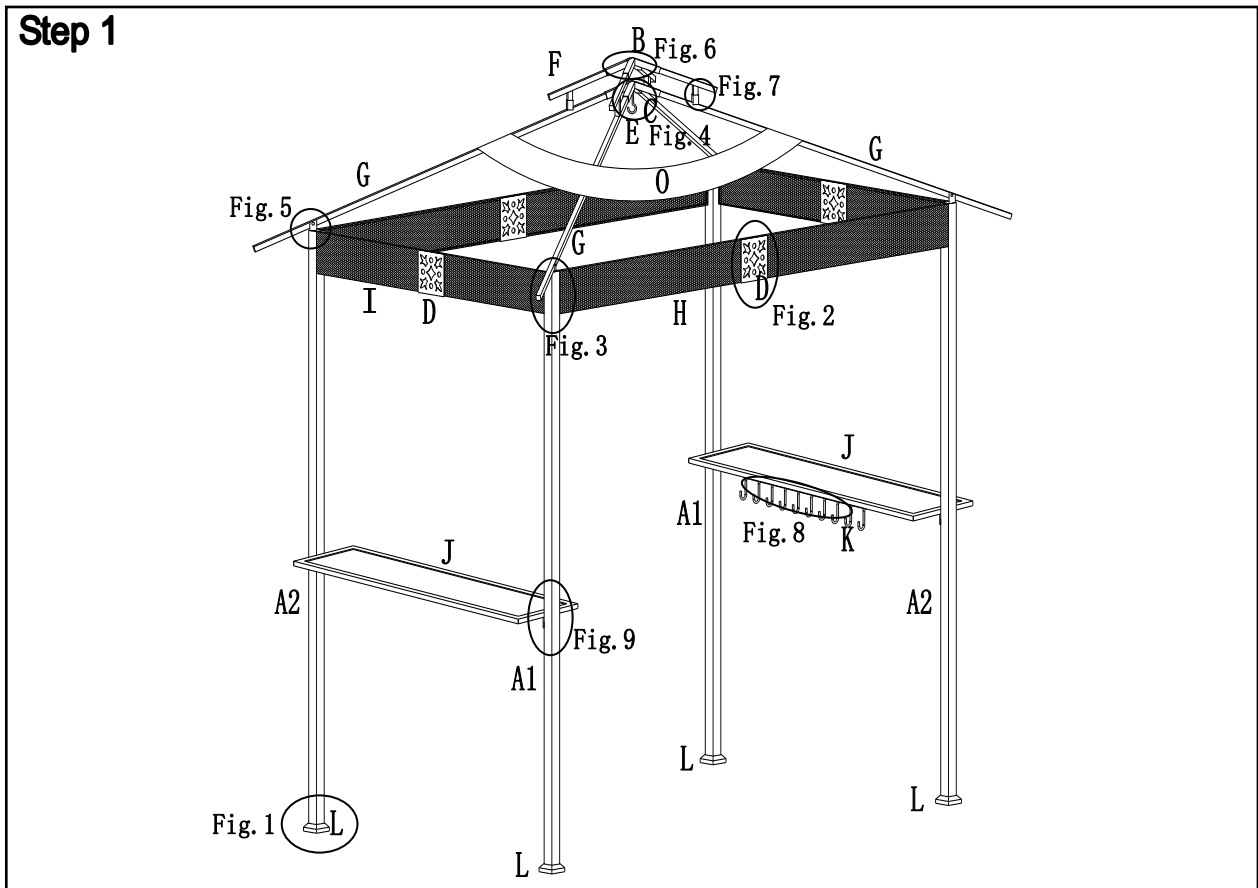


Fig.1: Insert the post (A1/A2) into the base cover (L) to from the bottom. And then attach base (M) to post by bolt (AA) and washer (BB).

Fig.2: Attach decorative cap (D) to long and short screen (H/I) and fix long/short screen (H/I) and decorative cap (D) together by bolt (CC) and washer (BB).

Fig.3: Attach long/short screen (H/I) to post (A1/A2) by bolt (DD) and washer (BB).

Fig.4: Connect the upper end of big beam (G) and big top connector (C) and attach the hook (E) to big top connector (C).

Fig.5: Fix the lower end of big beam (G) to post (A1/A2) by bolt (EE), washer (BB) and nut (FF). Put big canopy onto the big top and do not spread.

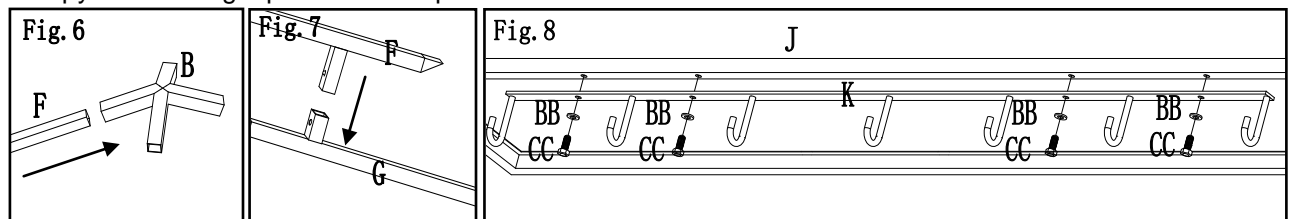


Fig.6: Attach small beam (F) to small top connector (B).

Fig.7: Connect the assembled small top to big beam (G) by the lower tube of small beam (F)

Fig.8: Connect the hook rack (K) and glass panel (J) together by bolt (CC) and washer (BB).

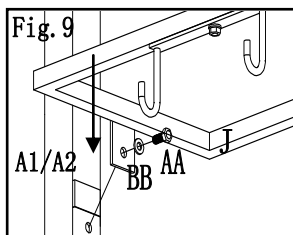


Fig.9: Inert the connector of glass panel (J) into the U-shaped piece of post (A1A2) and then attach the glass panel tightly by bolt (AA) and washer (BB).

Hardware Pack 2

FF	Φ 6X180MM Stake	8 PCS	
----	-----------------	-------	--

Step 2

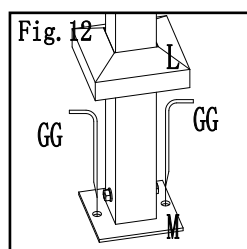
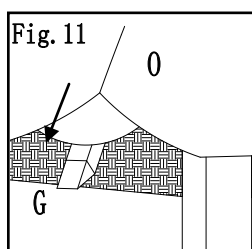
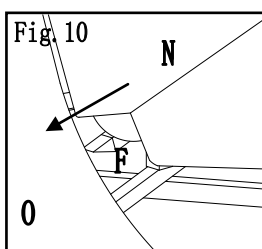
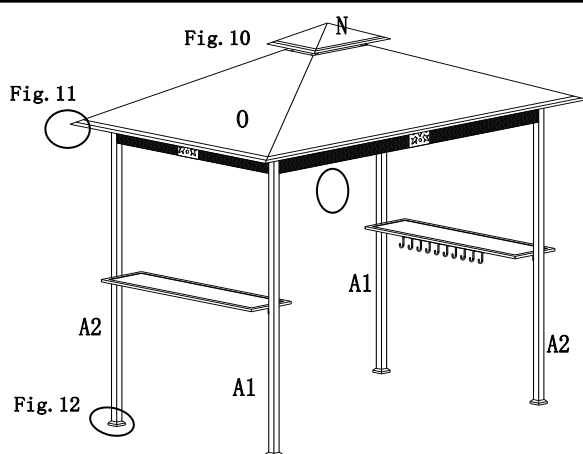


Fig.10: Put small canopy (N) onto small top, and attach four corners of the canopy to small beam (F).

Fig.11: Spread out the big canopy and attach four corners of the canopy to big beam (G).

Fig.12: Raise the base cover (L) and fix the assembled gazebo to lawn by stake (GG).

Limited Warranty:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **12 months**. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Maintenance:

Our iron/steel components for garden accessories and furniture are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

DON'T RETURN THE ITEM TO STORES, need tech. assistance or replacement parts, please call Sunjoy Industries at 1(866) 578-6569 from 8:30 am to 5:30 pm eastern standard time or e-mail to customer.care@sunjoygroup.com or fax your parts replacement order form together with the purchase receipt to 1 (740) 283-3549 for assistance.

Made in China